

# IMPORTANT!

## WARRANTY INFORMATION

---

The logo insert for this item is in this pouch.  
**PLEASE DO NOT DISCARD.**

---

For warranty purposes, the logo insert inside this pouch **must be installed** onto this unit.  
If this logo insert is not installed, the warranty will be void.

***\*Please refer to instructions on the other side of this card for insert placement.***

# IMPORTANT!

## WARRANTY INFORMATION

---

The logo insert for this item is in this pouch.  
**PLEASE DO NOT DISCARD.**

---

For warranty purposes, the logo insert inside this pouch **must be installed** onto this unit.  
If this logo insert is not installed, the warranty will be void.


***\*Please refer to instructions on the other side of this card for insert placement.***

## Installation and Placement Instructions for the Logo Insert

Please follow the installation and placement instructions below for your specific unit.

1. When your unit is unpacked and in place for operation, please remove the logo insert from the pouch.
2. Locate insert placement area on the unit according to the diagrams below.
3. Remove the adhesive from the back of logo insert.
4. Place the logo insert into cut-out on handle, starting at the left side and pressing firmly until all edges are flush with handle.

*(\*If you are placing the insert on a handle that has not yet been installed on the range, ensure that the rounded edge of the handle is facing upward.)*

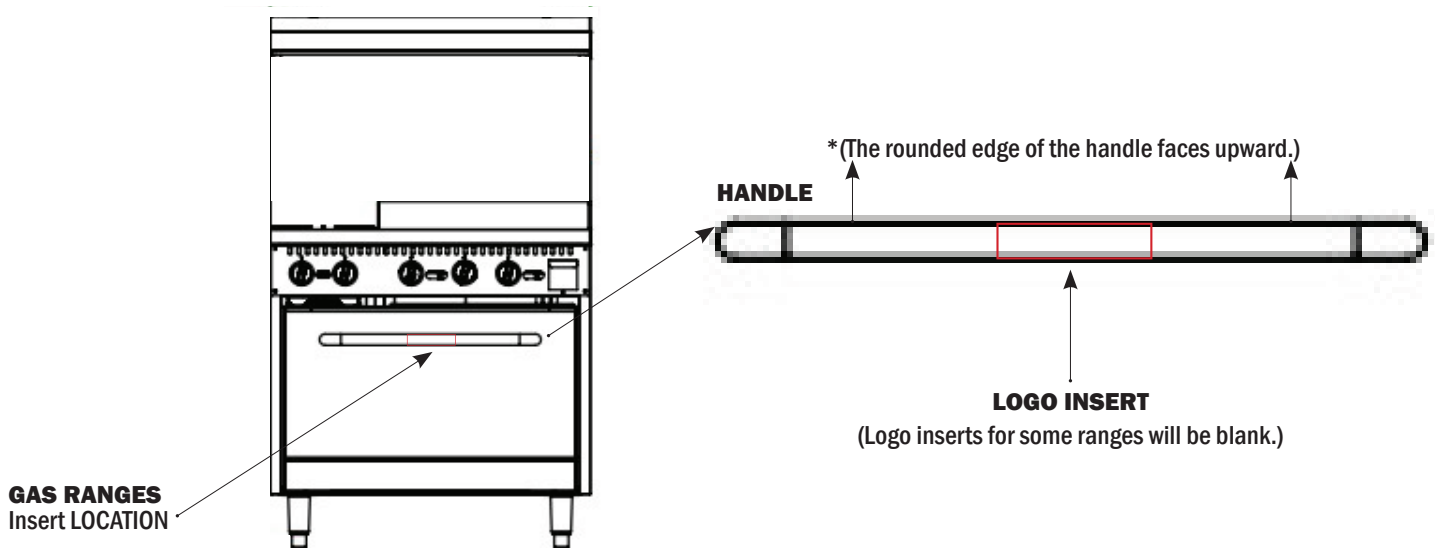

## Installation and Placement Instructions for the Logo Insert

Please follow the installation and placement instructions below for your specific unit.

1. When your unit is unpacked and in place for operation, please remove the logo insert from the pouch.
2. Locate insert placement area on the unit according to the diagrams below.
3. Remove the adhesive from the back of logo insert.
4. Place the logo insert into cut-out on handle, starting at the left side and pressing firmly until all edges are flush with handle.

*(\*If you are placing the insert on a handle that has not yet been installed on the range, ensure that the rounded edge of the handle is facing upward.)*

